


STEP TWO: Attach panel to post with standard method using straight clips and tek screws (Figure 2&3).

STEP THREE: Attach top rail and bottom snap to panel (Figure 4).

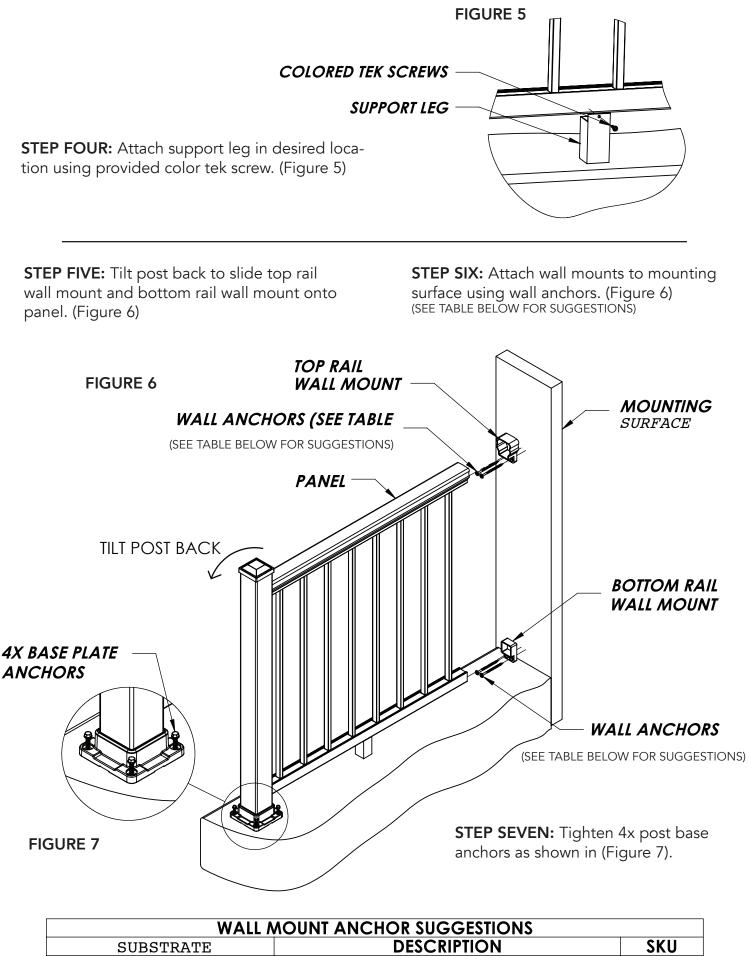

CONCRETE/BLOCK/BRICK5/16" X 3" TAPCON CONCRETE ANCHOR2327303WOOD5/16" X 4" GRK RSS EXTERIOR SCREW2300231